


AKZ 495

GB IE

PRODUCT DESCRIPTION SHEET

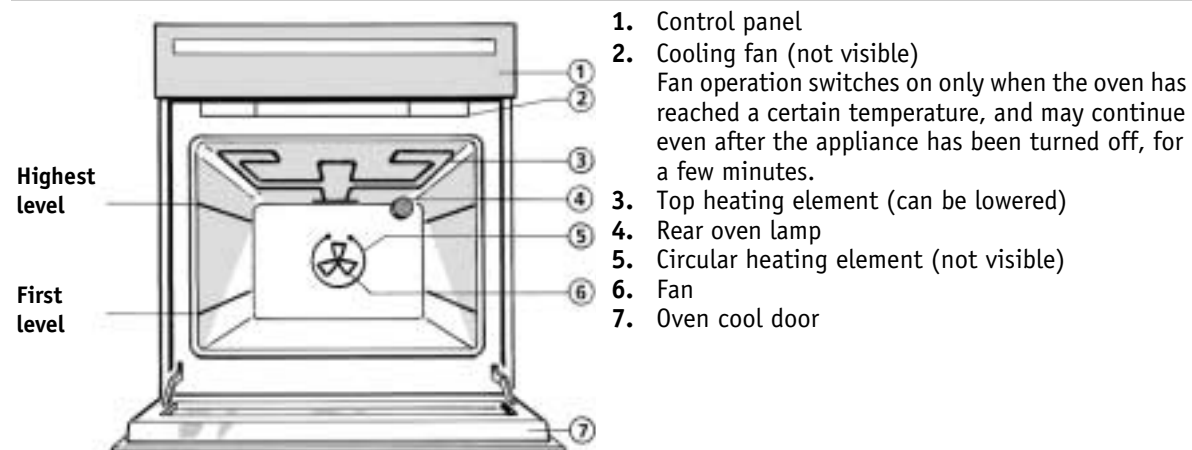

ACCESSORIES

Wire Shelf:




Grill pan set:



Side catalytic panels



CONTROL PANEL

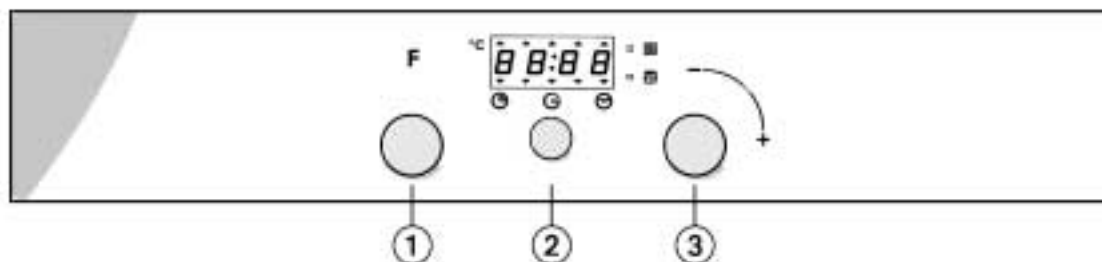


 














1. ON/OFF - Function Selector Knob.
2. Confirm and programme selection button
3. Pre-set values changing knob (temperature, time, levels)












 





Oven functions table

Function	Preset temperature	Adjustable temperature	Description of function
Oven OFF	-	-	-
LAMP	-	-	To switch on the oven light.
MLTF (Heat Maintenance)	35°C - 60°C	-	<ul style="list-style-type: none"> To keep the temperature steady inside the oven. 35°C: to raise dough for bread and pizza. 60°C: to keep food warm once it is cooked. It is advisable to use the first level.
FAN/THERMO-VENTILATED	160°C	50°C - 250°C	<ul style="list-style-type: none"> To cook (without preheating) foods that require the same cooking temperature on one or more levels (e.g.: fish, vegetables, sweets), without transferring odours from one foodstuff to the other.
GRILL	3	-	<ul style="list-style-type: none"> To cook small pieces of meat (smoked bacon, steaks, sausages, etc.) and for making toast. This function activates the left side of the upper grill element only. The function allows various settings (1 min. - 5 max.). The default position is (3). Pre-heat the oven for 5 min. with the door closed. For best results, leave the oven door open when grilling. Arrange food on the wire shelf. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray. It is advisable to turn the food during cooking.
DUAL GRILL			<ul style="list-style-type: none"> This function is ideal for cooking large pieces of meat (roast beef, roast joints) and for making toast. This function activates the entire top grill element. The function allows various settings (1 min. - 5 max.). The default position is (3). Pre-heat the oven for 5 min. with the door closed. For best results, leave the oven door open when grilling. Arrange food on the wire shelf. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray. It is advisable to turn the food during cooking.
TURBOGRILL	3	-	<ul style="list-style-type: none"> This function is ideal for cooking large pieces of meat (roast beef, roast joints). The function allows various settings (1 min. - 5 max.). Preheat the oven for 3/5 min. During cooking the oven door can be kept closed or open a little. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray. It is advisable to turn the food while it is cooked.

COOKING TABLES

FOOD	Function	Preheating	Level (from the bottom)	Browning level	Temperature (°C)	Cooking time (minutes)
MEAT Lamb, Kid, Mutton		X	3	2	200	100 - 110
Roast (Veal, Pork, Beef) (kg. 1)		X	3	3	200	100 - 110
Chicken, Rabbit, Duck		X	2	3	190	80 - 90
Turkey (kg. 4-6) + browning 3		X	1	3	200	160 - 180
Goose (2 Kg)		X	1	3	200	100 - 130
FISH (WHOLE) (1-2 kg) Gilt-head, Bass, Tuna, Salmon, Cod		X	3	1	190	45 - 55
FISH (CUTLETS) (1 kg.) Sword Fish, Tuna		X	3	2	190	40 - 50
VEGETABLES Stuffed peppers and tomatoes		X	2	-	200	50 - 60
Baked potatoes		X	2	3	200	50 - 60
SWEETS, PASTRIES, ETC. Raising cakes		X	1	-	180	40 - 50
Filled pies (with cheese)		X	2	-	180	70 - 80
Tarts		X	2	-	180	40 - 50
Applestrudel		X	1 - 3	-	200	50 - 55
Biscuits		X	1 - 3	-	200	20 - 30
Choux buns		X	1 - 3	-	180	35 - 45
Savoury pies		X	2	-	190	40 - 50
Lasagna		X	2	1	200	45 - 60
Filled fruit pies e.g. Pineapple, Peach		X	2	-	190	40 - 50
Meringues		-	1 - 3	-	120	120 - 150
Vol-au-vents		X	1 - 3	-	190	35 - 45
Soufflés		X	2	-	190	45 - 55

COOKING TABLE FOR GRILL FUNCTION

FOOD	Function	Preheating	Level (from the bottom)	Power level	Cooking time (minutes)
Sirloin steak		X	4	5	35 - 45
Cutlets		X	4	5	30 - 40
Sausages		X	3 - 4	5	30 - 40
Pork chops		X	4	5	35 - 45
Fish (cutlets)		X	3 - 4	5	35 - 45
Chicken legs		X	3 - 4	5	40 - 50
Kebabs		X	3 - 4	5	40 - 50
Spare ribs		X	3 - 4	5	35 - 45
Chicken halves		X	3	5	45 - 55
Chicken halves		X	3	5	45 - 55
Whole chicken		X	3	5	60 - 70
Roast (pork, beef)		X	2	5	60 - 70
Duck		X	2	5	70 - 80
Leg of lamb		X	3	5	70 - 80
Roast beef		X	3	5	50 - 60
Baked potatoes		X	3	5	50 - 60
Fish (Gilt-head, Trout)		X	3	5	50 - 60

N.B.: When cooking meat in Fan and Static functions, it is advisable to use the Browning function (level 1 to 3).
Cooking times and temperatures are approximate only.

GB

INSTRUCTIONS FOR USING THE ELECTRONIC PROGRAMMER

Electronic programmer



- 1 Turn ON/OFF knob - Function selector switch
- 2 Confirm and programme selection button
- 3 Pre-set values changing knob (temperature, time, levels)

Fast starting the oven

When the oven is connected to the power supply for the first time, or re-connected after a power failure, the display indicates “STOP”.

To start the oven:

- 1. Turn knob 1 to “0”.
- 2. Press button 2. The display shows “---”.

Selecting and changing the clock time:

- 1. Press button 2 three times.
- 2. Turn the knob 3 within 10 seconds to set the time of day. The display will show the time of day blinking.
- 3. Press button 2 or wait 10 seconds to have the setting accepted automatically.


To modify the time:

Press button 2 twice (the indicator ▼ above the symbol ⌚ will blink). Repeat the steps described above.

Selecting the cooking function:

- 1. Turn knob 1 to the chosen function: the display will show the selected temperature or grill level blinking.
- 2. If the displayed value is correct, press button 2 to confirm or wait 10 seconds to have the setting accepted automatically.

To change the pre-set temperature or grill level:

- 1. Turn knob 3: The temperature setting (or grill level when knob 1 is set to ) will blink on the display.
 - 2. Press button 2 to confirm or wait 10 seconds to have the setting accepted automatically.
- The oven will turn on 5 seconds after confirmation: the temperature increase indicators on the display ▲▲▲▲▲ will turn on in sequence °C----- showing the temperature increase.

N.B.:


The values set can also be changed during cooking.

At the end of cooking:

 
 

Switch the oven off by turning knob 1 to “0”. The time of day appears again on the display.

Important notes:

To cancel any selection, turn knob 1 to “0”.

Keeping button 2 down for 5 seconds deactivates the audio signal associated with the manipulation of knobs and buttons. The audio signal is enabled again by pressing button 2 for 5 seconds. For safety reasons, the oven switches off automatically after 4'30" of continuous operation (except for the Light and )

Display

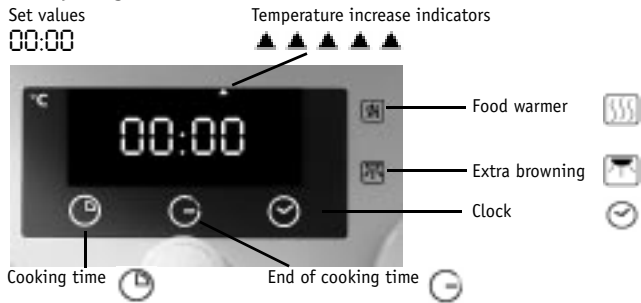

Using the oven with the electronic programmer

 
Selecting the cooking time:

Select the cooking time (available with any function) to turn the oven on for a specified period of time. At the end of the specified time the oven will switch off automatically. The maximum programmed cooking time is 3 hours and 59 minutes.



- 1. Set the function and temperature or grill level (see chapter: “Fast starting the oven” and “Selecting the cooking function”).
- 2. Press button 2 until the indicator on the display blinks next to the symbol ▼ and ⌚ “- 0:00” appears.



- 3. Turn knob 3 clockwise: the display will show the selected time blinking. “-” in front of the selected value indicates that the time will count down to “0”.



- 4. 20 seconds after it is set to automatic function, the oven will begin cooking and the display will show the remaining cooking time.
N.B.: to display or modify the previous temperature setting turn knob 3 one click. To return to the display of the remaining time wait 20 seconds, or press button 2.

To use the Extra browning  and Food warmer  special functions, consult the chapter “Special Functions”.

To change the pre-set temperature or grill level:

 
Turn knob 3 and confirm by pressing button 2 or wait 10 seconds to have the setting accepted automatically.

Appearance of End on the display:

Once the set time has elapsed (end of cooking), End an acoustic signal is heard and appears on the display for 15 minutes at intervals. The oven switches off automatically and the oven light stays on for 25 min.

- 1. Press button 2 to deactivate the acoustic signal.
- 2. Turn knob 1 to “0”. The oven light turns off.

The time of day appears again on the display.



Selecting the end of cooking time

Using this function it is possible to preset the end of cooking time. The maximum programmed cooking time is 3 hours and 59 minutes.

1. Set the function and temperature or grill level. See chapter: “Fast starting the oven”, paragraph: “Selecting the cooking function”.
2. Example: it is 10:00 AM: press button ② until the indicator ▼ on the display blinks next to the symbol ⌚ and “- 0:00” appears.
3. Set the oven cooking time (e.g. 45 minutes) by turning the knob ③: the time set will blink on the display.
4. Press button ② to confirm the setting selected (e.g. 45 minutes): The indicator ▼ will blink next to the symbol ⌚ and the display will show the time of day and the cooking time (e.g.: 9:00 + 45 minutes = 9:45).
5. Select the time at which the oven should switch off by turning knob ③ (e.g.: 12:30).
6. Press button ② until the time of day appears again (10:00), or wait 20 seconds to have the setting accepted automatically.

The oven will turn on automatically at the end of cooking time less cooking time (e.g. 12:30): the indicators on the display ▼ ▼ ▼ above the symbols ⌚ ⌚ ⌚ will light up.

To verify the chosen temperature or grill level, turn knob ③ by one click.

To verify or modify both the cooking time (e.g.: 45 min.) and the end of cooking time (e.g.: 12:30) press button ②.

Special functions: (Extra browning 🍖 e Food warmer 🍲)

 
 
These functions are only available when selecting the cooking or end of cooking times.

The two special functions can be selected together or separately

Extra browning 🍖


This function enables browning of food (e.g. a roast) while cooking. Choose one of the levels, 1-2-3, where number 1 stands for minimum browning and number 3 for maximum.

This function can only be selected in combination with the functions 🍲 🍲 🌡️.



Selecting the Extra browning special function 🍖:

 1. Set the cooking and end of cooking times. See “Fast starting the oven” and “Selecting the cooking function”.
2. Press button ② until the red indicator ■ on the display blinks next to the symbol 🍖 “0” appears.
3. Turn the knob ③ to choose the food browning level: 1, 2 or 3.
4. Press button ② twice or wait 30 seconds to have the setting accepted automatically.



Food warmer 🍲

This function keeps the temperature in the oven at 60°C at the end of the cooking cycle when the oven is on automatic function.

The “Food warmer” function can only be selected in combination with functions 🍲 🍲 🍲 🌡️.

Selecting the Food warmer special function 🍲:

1. Set the cooking and end of cooking times. See chapter: “Fast starting the oven” and “Selecting the cooking function”
2. Press button ② until the red indicator ■ on the display blinks next to the symbol 🍲 and “-- C” appears.
3. Turn knob ③ to “60C”.
4. Press button ② or wait 20 seconds to have the setting accepted automatically.

 


Timer

The timer can only be set when the oven is not in use and allows a maximum setting of 3 hours and 59 minutes.

To set the timer:

1. Leave knob ① on “0”. The display shows the time of the day.
2. Press button ② until the indicator ▼ blinks next to the symbol ⌚.
3. Turn knob ③ clockwise: The time set will blink on the display “-” in front of the selected value indicates that the time will count down to “0”.
4. Press the button ② or wait 20 seconds to have the setting accepted automatically.



Once the set time has elapsed:
An acoustic signal will be heard and the display will show End.
Press button ②: The acoustic signal stops. The time of day appears again on the display.